The Light Pen
Operating Instructions

Before Use:

Unscrew cap where batteries are located,remove and discard separator,Replace pen cap.The batteries will now make contact. To operate the light, remove the clear cap from the top of the pen Depress the button on the top of the pen to activate the light. Press the button once more to turn off the light



REMOVE CAP HERE

Writing with the Light Pen:

Remove plastic tip protection.To use the pen, hold the bottom part of the barrel firmly and rotate the top part of the pen clockwise. The ink cartridge will extend out of the bottom of the pen. Reverse the procedure to retract the ink cartridge.

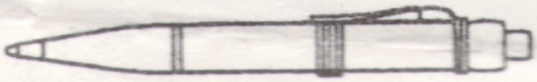

TWIST HERE

Replacing the refill:

To replace the Light Pen's refill, firmly hold the pen and twist the bottom of the pen, The bottom part will detach. Using your thumb and forefinger, twist the white plastic cap and pull this out of the lower pen barrel. Remove the refill from the white plastic cap (simply pull the refill out) and replace this with the new refill.Insert the refill and white cap back into the lower barrel. Twist the white cap to ensure that the refill is firmly placed into the lower pen barrel and make sure that the refill is fully extended. Put the lower barrel back onto the main barrel of the pen turning this lightly to ensure that the pen is put back together properly.

Finding refill replacements, the Light Pen uses Cross type D-1 pen refills. These are available at most office supply and stationery stores.

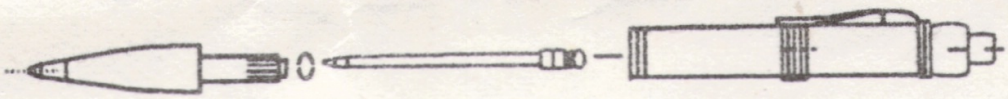

REPLACE REFILL HERE

Replacing the batteries:

To change the batteries twist the top barrel of the pen.
You must twist counter clockwise the top part of the barrel that is above the metal band to open the battery section. Install the batteries to allow for the light to function again.

INSERT BATTERY HERE

Battery Warning:

Made in China

Do not mix old and new batteries.
Do not mix alkaline.standard (carbon-zinc) or rechargeable (nickel-cadmium)batteries.